

Attaching to the Camera

1. Move the upper and lower slide locks (b) in the direction opposite to the arrow (►), while depressing the slide lock release lever (a).
2. Hold the double cut film/plate holder in a condition that the dark slide comes to the right side; then fit the cut film/plate holder while pressing it to the left side of the revolving adapter.
3. Secure the cut film/plate holder by fully shifting the upper and lower slide locks in the arrow direction.

Detaching from the Camera

Detach the cut film/plate holder after shifting the upper and lower slide locks in the direction opposite to the arrow (►), while depressing the slide lock release lever.



Mamiya
CAMERA CO., LTD.

Printed in Japan

Instructions

Mamiya RB67

Double Cut Film/Plate Holder

Type A/Type J

There are two types of double cut film/plate holders available—A and J. Both types can be used for photography with cut films or plates by installing them on the revolving adapter of the Mamiya RB.

Cut films or plates can be inserted in both sides of the holder, easily achieving efficient single-exposure photography. The methods of handling types A and J are the same except when using the film sheath.



Cut Film or Plate to be Used

In the case of type A :

Type	Nominal size	Film sheath
Plate	2 1/2 × 3 1/2 in. 6.5 × 9 cm	Unnecessary
Cut film	2 1/2 × 3 1/2 in. 6.5 × 9 cm	Unnecessary
	2 1/4 × 3 1/4 in.	Use type A

In the case of type J :

Type	Nominal size	Film sheath
Plate	2 1/2 × 3 1/2 in. 6.5 × 9 cm	Unnecessary
Cut film	2 1/2 × 3 1/2 in. 6.5 × 9 cm	Unnecessary
	One-quarter size of 4 3/4 × 6 1/2 in. (12 × 16.5 cm)	Use type J


Film sheath is manufactured exclusively for respective type of holder. Use the type A film sheath for the type A holder, and the type J film sheath for the type J holder.

Number Labels

Use number labels by sticking them on each side of the holder to arrange the using order.

Method of Sticking Labels

Stick odd-numbered labels on the side with a door tongue, and stick even-numbered labels on the opposite side.

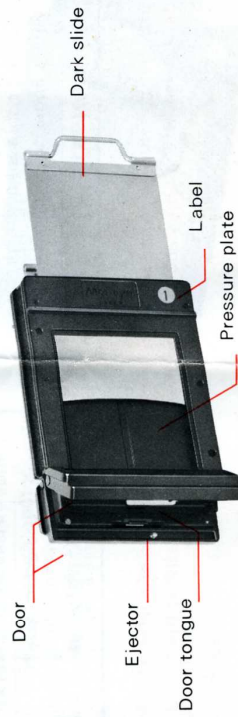


— 3 —

Inserting Method of Cut Film or Plate

When Using 2 1/2 x 3 1/2 inch Cut Film and 2 1/2 x 3 1/2 inch Plate

1. Open the door after pulling out the odd-numbered dark slide until almost the end.
2. Fully insert a cut film or plate in the holder while depressing the pressure plate with a finger tip.

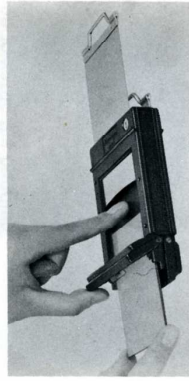

— 4 —


How to Use the Film Sheath

Film to be used: Cut film 4 3/4 x 6 1/2 inch (12 x 16.5 cm) equally divided into four parts

bered labels on the opposite side. Respective labels should be stuck on the circular recessed portion in an order starting from No. 1. For instance, when you have five sets of holders, stick (1) and (2) on the first set and stick (9) and (10) on the fifth holder.

1. Insert the film in the four holders on the type J film sheath.
2. While depressing the pressure plate with a finger, insert the film sheath in the holder.

Insert the film sheath in the holder by holding the center portion (narrowed portion) of the film sheath so that the film does not slip to the right or left against the film sheath.

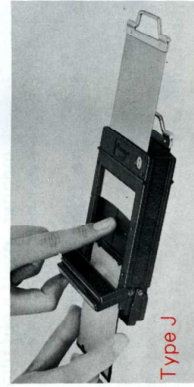

Type J

— 5 —

Method of Drawing Out a Cut Film or Plate

1. Open the door after pulling out the dark slide of the odd-numbered side approximately one inch.
2. Use a finger nail to pull out the ejector.

With this operation, a plate, cut film, or film sheath can be slightly pulled out for easy removal.



— 6 —

3. To pull out the ejector on the even-numbered side, first pull out both sides of the dark slides and leave the doors opened.

As long as both side doors are opened, the ejector in the even-numbered side cannot be pulled out.



Type A